



Thank you for bringing our cuckoo clock to your home!

### Instructions



**\*Please read these instructions completely before assembly. It is very important to follow them exactly to avoid damaging the clock.**





1. When removing the clock from the box, please lift it by its roof .



2. Carefully remove the loose accessories (separately wrapped) which include the pendulum and the weights. Turn the minute hand clockwise till it points to 12 o'clock.

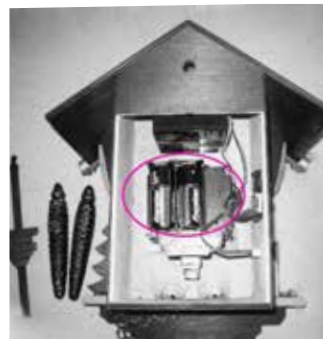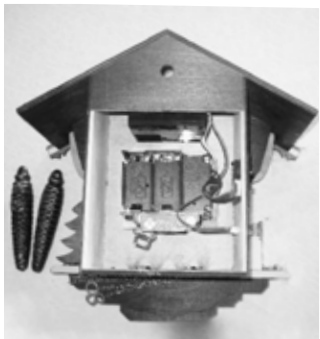

3. Open the back cover and insert two batteries into battery holder.

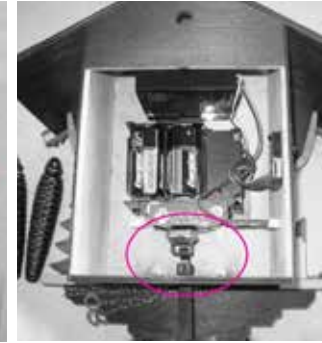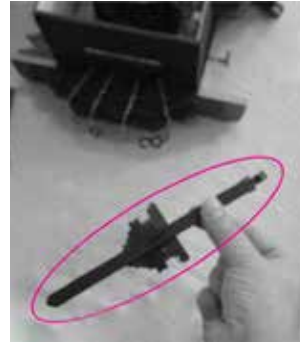

4. Fixate the pendulum, close the back cover and hang the clock on the wall.



5. Hang each of the weights to the respective chain hook.

### Setting the time:

Turn the minute hand clockwise, until the clock tells the correct time.

**\*Important:** At every full hour, let the cuckoo strike hour.

\*Should the time of the clock not correspond to the number of cuckoo strikes, please proceed as follows:

Example: If the cuckoo strikes twice, turn **the hour hand** to II.  
If the cuckoo strikes nine times, turn **the hour hand** to IX.

### Volume Switch:

At the right side of the clock you will find a switch for the sound: "max", "min", "off".

### Batteries:

The batteries must be replaced if the bird's door does not open or close anymore or if the clock is slow.