A large, detailed line drawing of a traditional cuckoo clock, showing a wooden house with a gabled roof, a clock face with a bird, and two hanging weights. The drawing is light gray and serves as a background for the text.

INSTRUCTIONS

HOW TO BRING LIFE INTO YOUR CUCKOO CLOCK

All our clocks are lovingly made by hand.
Please handle them with care.


QUARTZ CLOCKS

Instructions

*Please read these instructions carefully before assembly. It is very important to follow them exactly to avoid damaging your cuckoo clock. Any damages caused by not following the instructions will invalidate the guarantee.



1. When removing the clock from the box, please lift it by its roof.

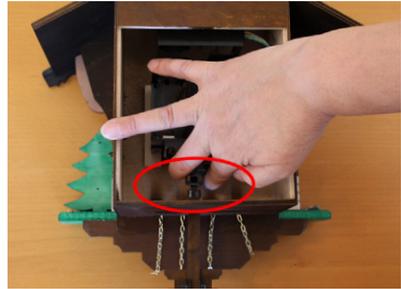

4. Fixate the pendulum and close the back cover.



2. Carefully remove the separately wrapped pendulum and weights.



5. Hang the clock on the wall and attach the weights to the respective chain hook.



3. Open the back cover and insert two size-C batteries into the battery holder.

Setting the Time

Turn the minute hand clockwise, until the clock tells the correct time.

**Please allow the cuckoo to strike fully at every full hour to avoid any damages.*



Volume Switch

You will find on the left side of the clock a switch for the sound: "max", "min", "off".

An integrated **light sensor turns off the cuckoo strike automatically during the night.*



Batteries

This clock works with two size-C batteries.

**Should the bird's door not open or close, or if the clock moves slow, please replace the batteries.*



Setting the Cuckoo Strike

When the time of the clock does not correspond to the number of cuckoo strikes, please proceed as follows:

If the cuckoo strikes twice, turn **the hour hand** to II.

If the cuckoo strikes nine times, turn **the hour hand** to IX.

If you have any questions regarding assembly, please contact us by email:
info@loetscher.ch

International Warranty

This warranty only applies to cuckoo clocks sold or repaired under warranty.

Loetscher cuckoo clocks are guaranteed against any manufacturing defect: any piece which is defective due to a manufacturing defect, confirmed by our clockmakers, will be repaired or replaced free of charge by Loetscher.

In order to benefit from this warranty, please keep the receipt of your purchase. The warranty section on our box must be duly filled out, dated and signed by Loetscher or an authorized Loetscher retailer.

We recommend customers to keep the original box for transportation.

Customers can register the cuckoo clock on our website www.loetscher.ch to ensure smooth customer service.

Please note that this guarantee does not cover:

1. any problems caused by not following our instructions
2. problems caused by carelessness or rough handlings
3. repairs made by an unauthorized repair shop

If your clock's warranty has expired or not valid anymore, Loetscher or our authorized repair partner will provide you with a quote of the estimated repair costs.

Please note the following advice when shipping your clock for a repair:

Damages resulting from transportation or improper handling are not covered under the terms of the guarantee.

1. You must send the cuckoo clock well packed and insured to us or our authorized repair partner. **Please do not send the pine cone weights.**
2. We hold no responsibility for loss or damage during transit.
3. The sender's name, address and email address must be clearly stated. Also please include a note as to the nature of the problem.

Our service partners can be found at:

www.loetscher.ch/support